


1、CR 7 建模

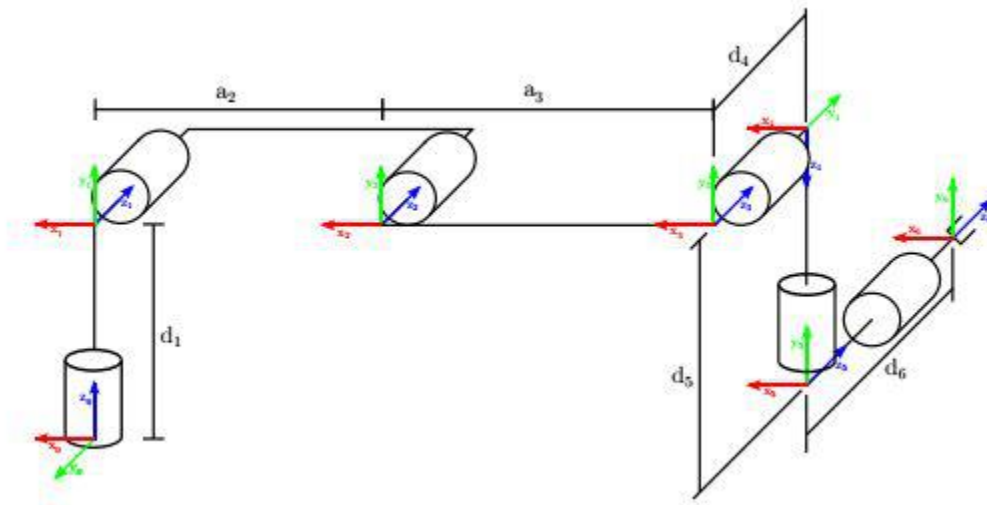

2、CR 7_Modified DH

	Theta[rad]	a[m]	d[m]	Alpha[rad]
Joint1	0	0	$d1 = 0.147$	0
Joint2	$-\pi/2$	0	0	$\pi/2$
Joint3	0	$a2 = -0.377$	0	0
Joint4	$-\pi/2$	$a3 = -0.307$	$d4 = 0.141$	0
Joint5	0	0	$d5 = 0.116$	$\pi/2$
Joint6	0	0	$d6 = 0.105$	$-\pi/2$

3、CR 7_Standard DH

	Theta[rad]	a[m]	d[m]	Alpha[rad]
Joint1	0	0	$d1 = 0.147$	$\pi/2$
Joint2	$-\pi/2$	$a2 = -0.377$	0	0
Joint3	0	$a3 = -0.307$	0	0
Joint4	$-\pi/2$	0	$d4 = 0.141$	$\pi/2$
Joint5	0	0	$d5 = 0.116$	$-\pi/2$
Joint6	0	0	$d6 = 0.105$	0